

# PROGRAMMING YOUR SET TOP BOX

Press and hold the **SETUP** button at the same time as the corresponding **COLORED BUTTON**, listed below, until the **CABLE POWER** button blinks twice. Set up is now complete.

YELLOW: Amino A140

RED (C): ADB

GREEN (D): Amino Kamai 650m

*We are committed to providing the best service available. Simply program your remote and set top box to start enjoying all the features and functions.*

# PROGRAMMING YOUR REMOTE

## METHOD A:

1. Press and hold **SETUP** button until LED blinks twice.
2. Press the **TV POWER** button.
3. Press and hold the **DIGIT KEY** for your TV brand.
4. Let go of the key when your TV turns off. Setup is complete.

**2 Blinks** = success

**1 Long Blink** = failure

DIGIT	TV BRAND
1	Insignia/Dynex
2	LG/Zenith
3	Mitsubishi
4	Panasonic
5	Philips/Magnavox
6	Samsung
7	Sharp
8	Sony
9	Toshiba
0	Vizio

## METHOD B:

1. Press and hold **SETUP** button until LED blinks twice.
2. Press the **TV POWER** button.
3. Press and hold down the **OK/SELECT** button.
4. Let go of the **OK/SELECT** button when the TV turns off.

## BIG BUTTON REMOTE CONTROL GUIDE



# CONTROLLING YOUR REMOTE

**TV POWER**  
Turn off/on TV

**MENU**  
Displays the menu

**GUIDE**  
Opens the Program Guide

**ARROW KEYS AND OK/SEL** Navigate and select menu and guide choices

**EXIT**  
Exit the current screen

**RED, GREEN, YELLOW, BLUE** Access additional features on set-top box

**VOLUME UP AND DOWN**  
Raise or lower the volume

**MUTE**  
Turn the sound off or on

**NUMBER KEYS (0-9)**  
Directly select a channel or enter options

**INPUT**  
In TV control mode, will change the input of the device you are controlling

**SETUP**  
Hold for 3 seconds to enter programming

**CABLE POWER** Turn on/off cable box

**INFO**  
Display current channel and program information

**FAV**  
View your favorite channels

**ON DEMAND**  
Access video on demand services

**CHANNEL UP & DOWN**  
Changes to the next higher or lower channel

**LAST**  
Recall the last channel you were watching

**REW, PLAY, FFWD, STOP, PAUSE, REC**  
Controls playback of live and recorded TV

**CC**  
Turns on/off Closed Captioning



## SEE WHAT'S ON:

*There are multiple ways to see what is showing on your TV.*

### INFO BUTTON:

Press **Info** and you will see the name and a description of the current program at the top of the screen.

### OK BUTTON:

Press **OK** to show the 'Now Playing' bar and you will see what program is currently playing.

### GUIDE BUTTON:

Press **Guide** to see the most comprehensive view of what's on. Go ahead and arrow through...

...You're bound to find something to watch.

### BROWSE BUTTON:

Press **Browse** (right arrow) to show the channel you are currently tuned to at the top of the screen. At the bottom of the screen, the 'Info Bar' shows you the channel number, channel name, current date and time, program name, date and time the program airs, a progress bar, and the program that airs next.