

# Potenza Remote

Below is an explanation of how each button on the Polaris remote responds, depending on if you are in the guide, watching a program, or in your recordings.

## TV, AUD, DVD, VCR, STB

Use one remote to control multiple devices.

## Setup

Use for programming sequences of devices controlled by the remote.

**Skip Forward, Skip Back, Rewind, Play, Fast Forward, Stop, Pause, Record In STB mode**, these buttons control the DVR functions. In other modes, these buttons control a VCR, DVD Player or PVR.

## Menu

Displays the menu.

## Guide

Opens the Interactive Program Guide.

## Day +/-

Jump ahead/back one day in the Interactive Program Guide.

## Red, Green, Yellow, Blue

Access additional features on your set top box.

## Vol +/-

Raise or lower the volume.

## Mute

Turn the sound off or on.

## Aspect Ratio \*

Temporarily change the conversion mode from Original Size to Fit to Screen.

## Input

Change the input of the device you are controlling when in TV control mode.

## Power

Turn on/off a selected device.

## Live

Return to watching live TV.

## List

Display a list of recorded, future and series rules on your DVR.

## Info

Display the current channel and program information. Press again for more detail.

## Browse, Search, Arrow and OK

Navigate and select on-screen choices.

## Exit

Exit current screen.

## Page +/-

Page up/down in lists and Interactive Program Guide.

## Channel +/-

Change channel, up/down.

## On Demand

Access video-on-demand services.

## Last

Recall the last channel viewed.

## FAV

View your favorite channels.

## CLOSED CAPTIONING

Turn closed captioning on/off.



## Number Keys (0-9)

Directly select a channel or enter options.

*\*If Available*