

BIG BUTTON REMOTE CONTROL GUIDE

TV POWER
Turn off/on TV

MENU
Displays the menu

GUIDE
Opens the Program Guide

**ARROW KEYS AND OK/
SEL** Navigate and select
menu and guide choices

EXIT
Exit the current screen

**RED, GREEN, YELLOW,
BLUE** Access additional
features on set-top box

VOLUME UP AND DOWN
Raise or lower the volume

MUTE
Turn the sound off or on

NUMBER KEYS (0-9)
Directly select a channel or
enter options

INPUT
In TV control mode, will
change the input of the
device you are controlling

SETUP
Hold for 3 seconds to
enter programming

CABLE POWER
Turn on/off cable box

INFO
Display current channel
and Program information

FAV
View your favorite
channels

ON DEMAND
Access video on demand
services

**CHANNEL UP AND
DOWN** Changes to the
next higher or lower
channel

LAST
Recall the last channel
you were watching

**REW, PLAY, FFWD,
STOP, PAUSE, REC**
Controls playback of live and
recorded TV

CC
Turns on/off Closed
Captioning



SEE WHAT'S ON

There are multiple ways to see what is showing on your TV.

INFO BUTTON: Press **Info** and you will see the name and a description of the current program at the top of the screen.

OK BUTTON: Press **OK** to show the 'Now Playing' bar and you will see what program is currently playing.

GUIDE BUTTON: Press **Guide** to see the most comprehensive view of what's on. Go ahead and arrow through...
...You're bound to find something to watch.

BROWSE BUTTON: Press **Browse** (right arrow) to show the channel you are currently tuned to at the top of the screen. At the bottom of the screen, the 'Info Bar' shows you the channel number, channel name, current date and time, program name, date and time the program airs, a progress bar, and the program that airs next.