

PROGRAMMING YOUR SET TOP BOX



PLEASE NOTE: If your set top box looks like this (Amino), the set up of your remote is complete and you do not need to do the following steps.

However, if your set top box does not look like the one pictured here (therefore, is not Amino), please follow the steps below to complete set up of your remote.

1. Press and release the **STB** button.
2. Press and hold the **SETUP** button and the number **6** button, at the same time, until the STB button blinks twice. Set up is now complete.

We are committed to providing the best service available which is the reason for our new video system. Simply program your remote and set top box to start enjoying all the new features and functions.

3/20/18

PROGRAMMING MASTER POWER KEY

1. Press and hold **SETUP** key until the last device key blinks twice.
2. Enter **9 9 5** and release.
3. Press **POWER** once.
4. Press the **TV** button.
5. Press and hold **SETUP** key until the last device key blinks twice (3 seconds.)



166 West Main Street 507-498-3456



PROGRAMMING
YOUR REMOTE & SET TOP BOX

 
PROGRAMMING YOUR REMOTE CONTROL

1. Manually turn on the TV that you want to set up on the remote.
2. Press and hold the **SETUP** button until the TV button blinks twice.
3. Press and release the **TV** button. The TV button will stay lit.
4. Find your TV brand from the chart below and note the DIGIT button assigned to your brand. Press and hold down the digit button for your device/brand while pointing the remote at the TV.

DIGIT	TV BRAND
1	Insignia
2	LG
3	Panasonic
4	Philips/Magnavox
5	Samsung
6	Sanyo
7	Sharp
8	Sony
9	Vizio
0	Westinghouse

**if your model is not on this list, please call our office at 498-3456.*

5. Let go of the button when your device turns off. Set up for that device is complete.

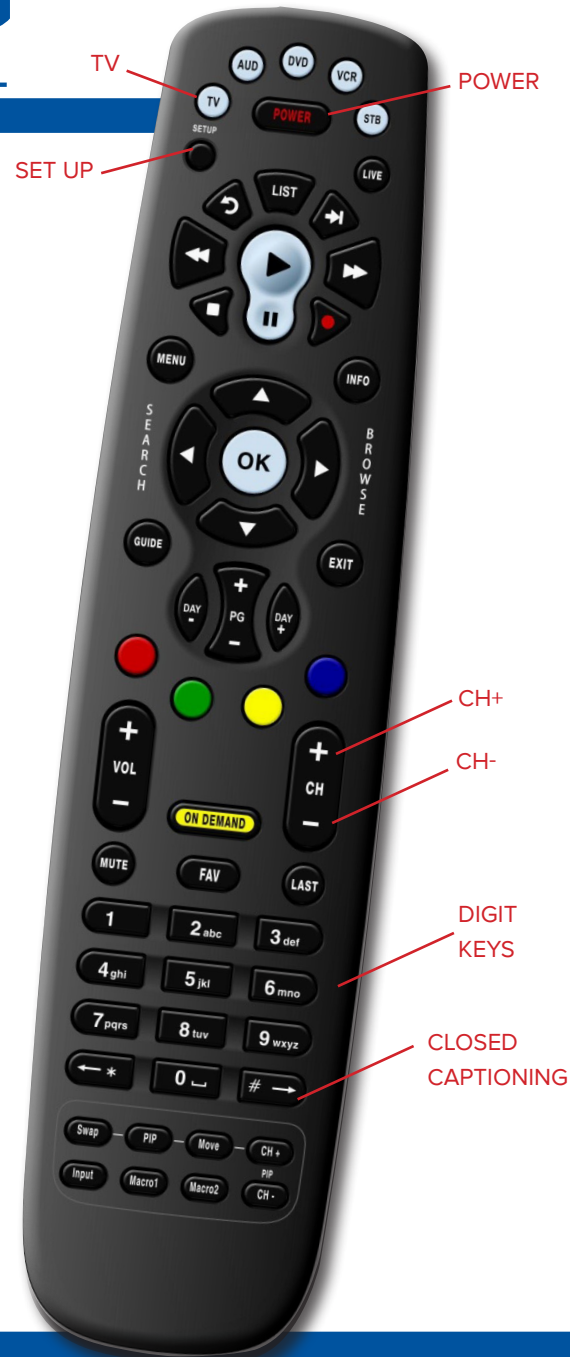

Searching for your code:

If your home entertainment device does not respond to the Potenza ST Universal Remote Control after trying all of the codes listed for your brand, or if your brand is not listed at all, try searching for your code.

1. Turn on your TV.
2. On the remote control, press **TV** once; it will blink once. Then press and hold **SETUP** until the TV button blinks twice.
3. Type **991** using the digit buttons. The TV button will blink twice.
4. Aim the remote control at the TV and press **POWER** once.
5. Press and release the **CH+** button continuously, then stop when the TV turns off. Immediately press **SETUP** and the TV button will blink twice to lock in the code. **NOTE:** In the search mode, the remote control will send IR codes from its library to the selected device, starting with the most popular code first.
6. Press **POWER**. The TV should turn on. **NOTE:** If the TV does not turn on during step 6, repeat steps 1-5.
7. To search for the codes of your other devices, repeat steps 1 through 6, but substitute the appropriate button (e.g., **TV**, **AUD**, **DVD**, **AUX**, or **STB**) for the device you are searching for.